


Instructions for tour mechanism SPIKEbulldog binding.

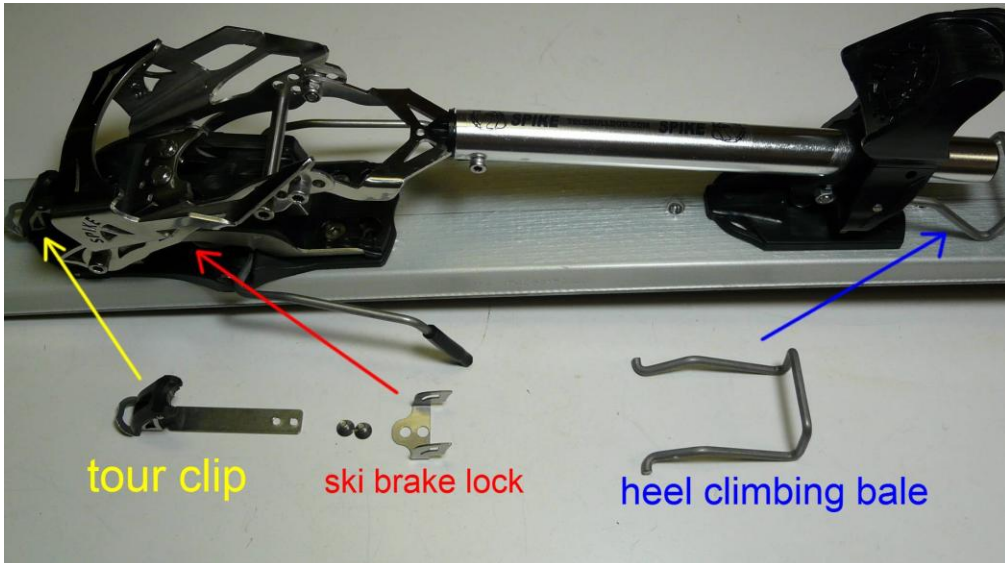

Pictures above show the parts that convert the SPIKE to a touring binding.



IF NOT USING A SKI BRAKE: The tour clip is inserted through a slot between the plastic and metal base. A single screw or a bend in the arm of the clip holds it in place.



The tour clip is engaged by pushing down on the release toggle with your pole and sliding the clip back with your hand (yellow arrow)

* TOURING WITH A SKI BRAKE*



Touring with a ski brake requires the addition of the ski brake lock which screws onto the touring clip.



To activate the tour mode: 1) step down with your boot (this retracts the ski brake) 2) push down on the toggle 3) push touring clip back to engage, both, the toggle and the ski brake. This takes a little practice. **NOTE 1) Do not force the clip back if the ski brake is not fully retracted. This will bend the mechanism of the ski brake lock. 2) Follow the mounting instructions carefully when stalling the ski brake lock so it tracks properly in the plastic slots under the base of the binding.**