

## Instructions for using tour function on SPIKE bulldog.

To engage the touring clip, place pole towards the rear of the toggle surface , depress the release toggle with your pole, and push the tour clip back with your free hand.



The touring clip is engaged and the binding is in touring mode below (yellow arrow below: the latch is held forward by touring clip to allow the toe box to pivot freely).



To disengaging touring mode depress the release toggle with a ski pole and lever the ski pole forward .



In picture below, the binding is back to ski mode and the latch is ready to lock the toe box for skiing.



## Using the touring mechanism with the ski brake.

It is important to step down with the ski boot to engaging or disengaging the tour clip. By stepping down, the ski brake is fully retracted (yellow arrow below) and allows the ski brake lock to slide back and catch the ski brake while it is retracted).



The picture below shows the 'ski brake' and the 'release toggle' engaged by the 'ski brake lock' and 'tour clip' for touring.



ski brake lock

touring clip



full on touring with ski brake retracted...