



Brief instructions how to remove the SPIKE toe box.

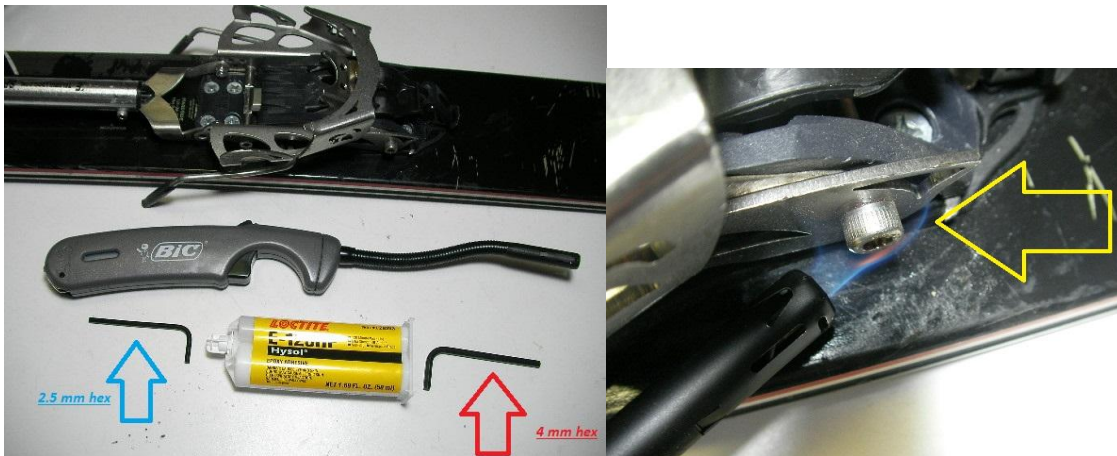

Tool needed above...

When the SPIKE binding is assembled, the screws are set with a heat sensitive 2 part epoxy (yellow cartridge).

Heat the head of the screws with a lighter as shown (above right) for approximately 1 minute-while being careful not to damage the plastic.

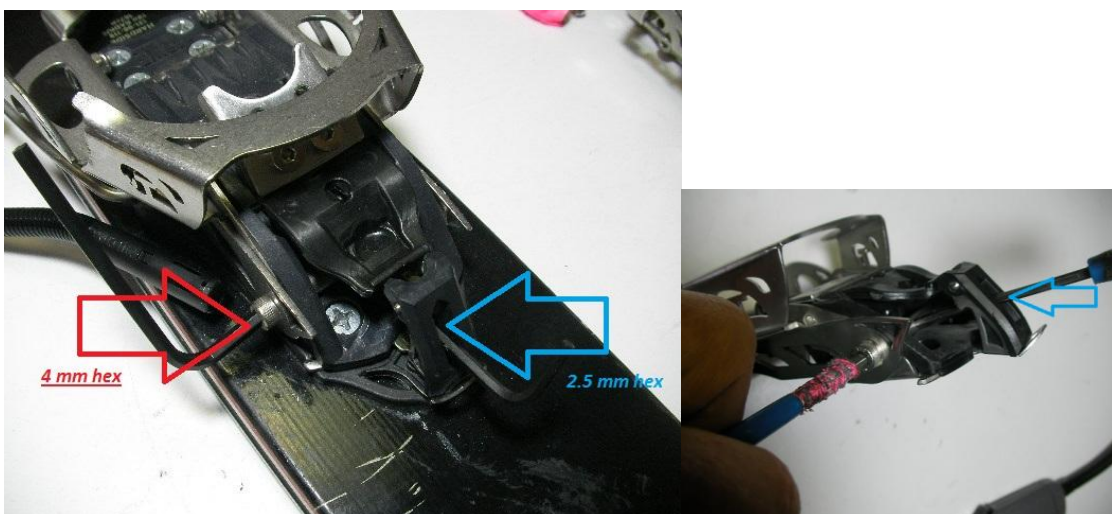

Hold the crossbar from turning by inserting a 2.5 mm hex in the hole through the mid aspect of the crossbar. Use a 4 mm hex the unscrew the bolts. If the bolt do not unscrew easily then apply more heat to the head of the screws. Do one side at a time.



Remove the toe box and replace with another... or this is a good way to partially disassemble your skis and bindings for easier packing when traveling. The screw can be dipped in vibra-tite, or the threads can be crimped slightly to prevent loosening when the binding is reassembled.