



Instructions on rebuilding classic Telebulldog binding.

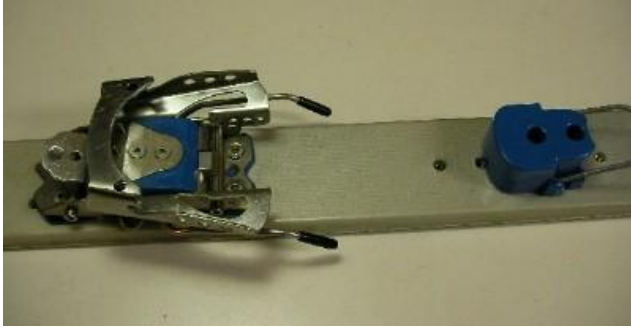

Step 1) unmount the binding from the ski.

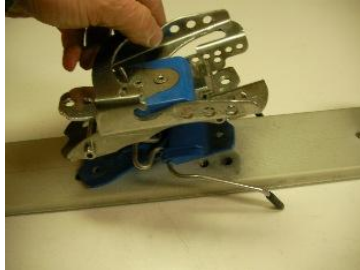

Step 2) remove ski brake wire and replace it into new plastic



Step 3) remove pin plate and replace plastic



At this point you have this...



The following steps complete the conversion to free pivot touring...

Step 4) replace the toggle: remove cotter pin (wire cutter works best)



push latch forward with your thumb and drop new cotter pin into the hole at the end of the latch



after installing the toggle, check overlap of latch with cross bar, then spread the legs on cotter pin




(latch should overlap approx 1/2 width of crossbar)

Mount toe piece back on ski (see mounting instructions) if you are remounting in same holes, I highly recommend placing 5th mounting screw in the rear of the binding

Step 5) attach heel (see heel attachment instr)



Step 6) install heel riser (see mounting instr)

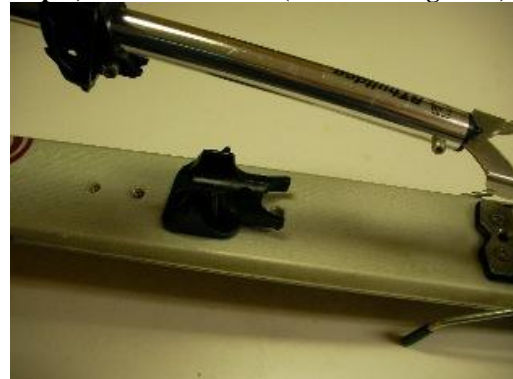

Completed rebuild...RTxbulldog with tour