


LITE DOGZ BINDINGS

Instructions for mounting

Bulldog bindings use a standard 4 hole mounting pattern.

You can use the brake plate as the template to mark the mounting holes on the ski.

The diamond shape hole in the middle of the plate is the pin line.

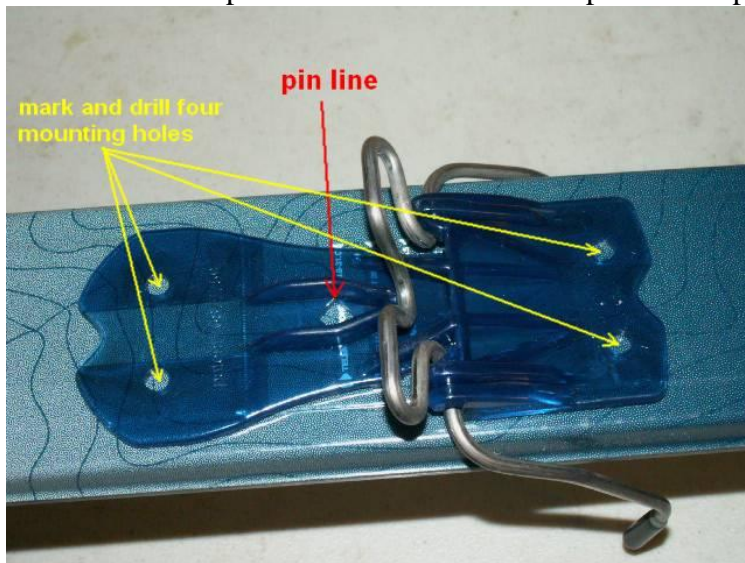


Tap and drill holes into the ski using 1/8" drill bit approx 1/4" deep.

Place the binding over the brake plate and screw to the ski.



Snap your ski boot into the binding and mark the ski at the heel of the boot. Mount the heel riser 5/8 inch forward from the rear of the ski boot as shown below. Use shorter mounting screws (11mm) for the heel riser. Mount the heel riser with the prongs pointing towards the toe of the binding.

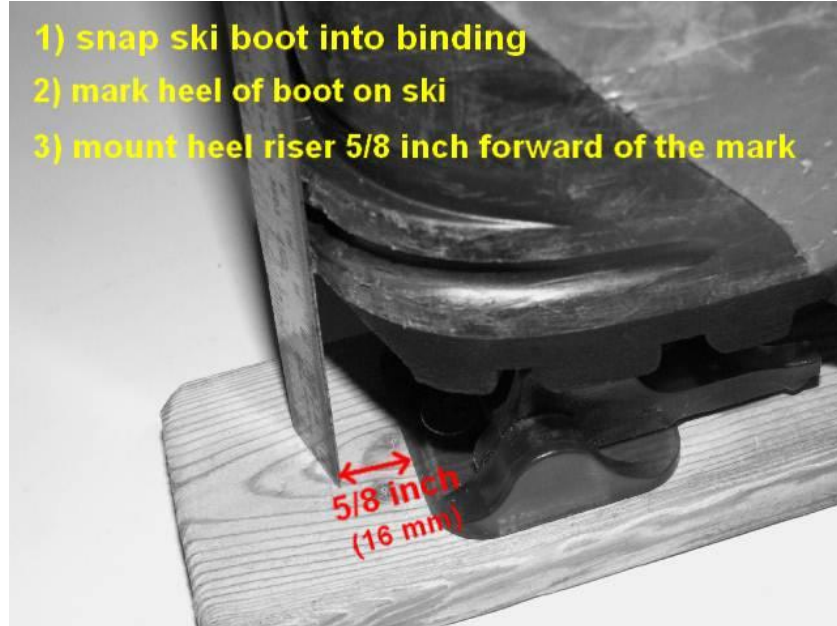

The binding should look like this.

