

THESE ARE SPECIAL INSTRUCTIONS FOR 3 PIN TELEBULLDOG BINDINGS (Lite Dogz, classic Telebulldog 3 pin, or SPIKEbulldog 3 pin bindings)

A locking screw at top of duckbill adds longevity to the 3 pin holes by redistributing the force to the top of the duckbill (yellow arrow below).



DUCKBILL LOCK SCREW INSTALLATION INSTRUCTIONS:

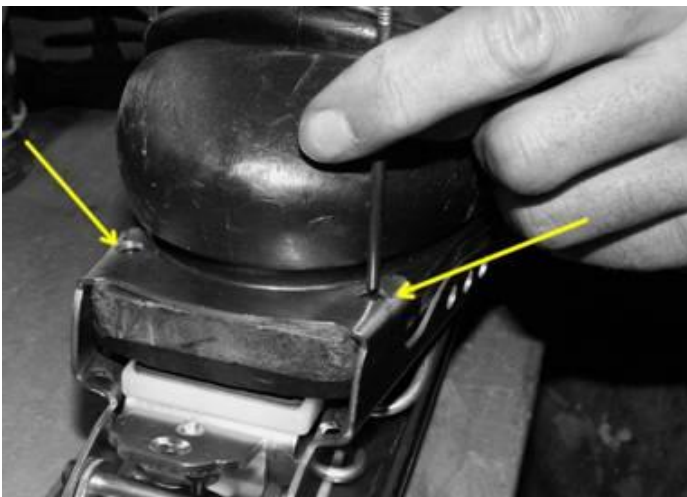


Figure 1 Insert boot into binding and mark center of lock hole.

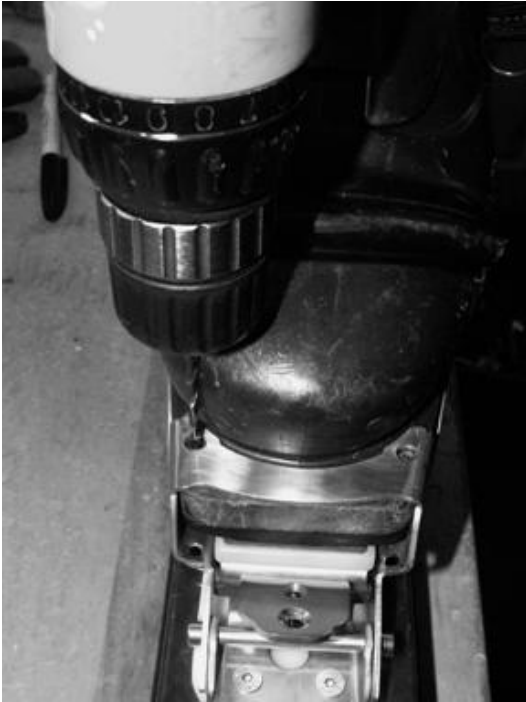


Figure 2 Tap ski boot with small drill bit approx 1/2" deep.



Figure 3 Remove boot from binding and screw into tap holes, 3/4" #8 stainless steel wood screw.



Figure 4 Head of screw will line up with lock hole when inserting boot.



Figure 5 Step into binding and screw head will lock into hole.