



Removable touring parts.

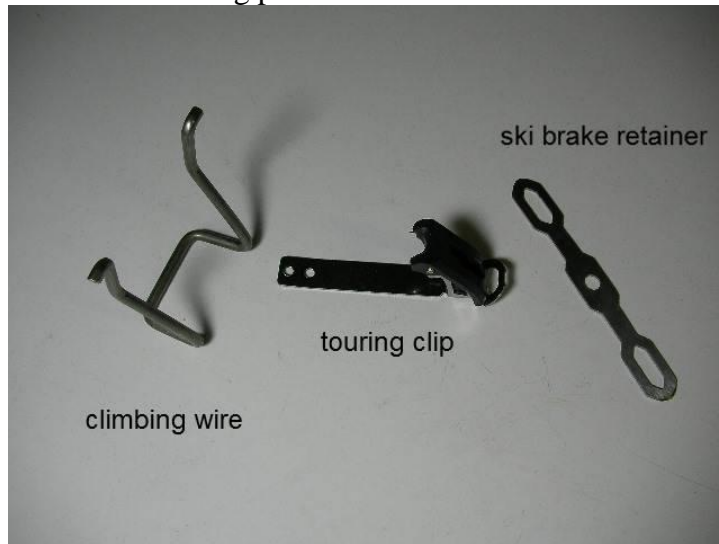

Install ski brake retainer by pulling brake wire up and sliding the plastic ends through the slots at the end of the retainer. Allow approximately 1/8 of plastic to protrude through retainer for secure hold (yellow arrow).



Slide touring clip into slot in front of binding...touring clip and ski brake retainer installed (right).

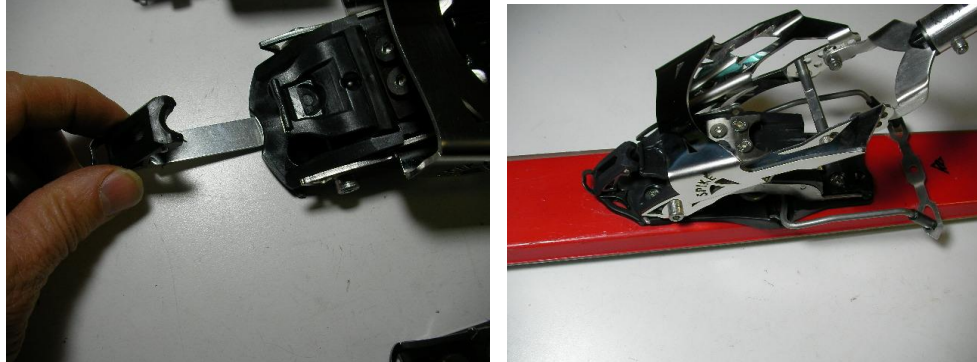

Depress release toggle with a ski pole and slide touring clip back and to engage free pivot touring.

